


Cleaning Guidelines For imageRUNNER ADVANCE Devices



DO Use


- Lint-free or microfiber cloth
 Isopropyl alcohol (at least 70% concentrate)
- ✓ Glass cleaner on platen
- Disposable gloves

Do NOT Use

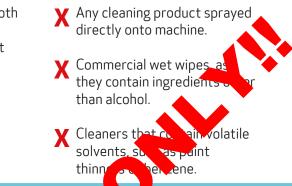

Clean all areas of the imageRUNNER ADVANCE device that are couched by users, such as control panels, covers, and jam locations, while using these precautions:

Make sure the device is powered down and unplugged before cleaning.

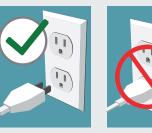

Wait until surfaces are dry before plugging in and powering on the device.



CAUTION

- This cleaning method does not guarantee effectiveness against any particular virus.
- Isopropyl alcohol is flammable d should never be used near open fire or flame.

Division of touchpoints to operate the imageRUNNER ADVANCE device?

With **Remembers tors Kit**, the imageRUNNER ADVANCE user interuser inter- and hard keys are replicated on a computer

screws a ser can open can device functions—copy, print, fax, scan, send—from a network connected computer.



This recommended cleaning procedure cannot guarantee the elimination of microbes, including but not limited to the novel coronavirus, from Canon imageRUNNER ADVANCE products. Be cautious in the storage and use of the alcohol, including following all product instructions and warnings. Canon and imageRUNNER are registered trademarks or trademarks of Canon Inc. in the United States and may also be registered trademarks or trademarks in other countries. Specifications and availability subject to change without notice. Not responsible for typographical errors. @2020 Canon U.S.A., Inc. All rights reserved.



Use a compatible mobile device to connect to the imageRUNNER ADVANCE device through enhanced features of the free **Canon PRINT Business app**. This allows users to perform many functions of their MEP from the

familiar interface of their smartphone or tablet.

